





Tweco®, Miller®, LPB and LPW Connection



The system is built with a common gun plug connector, allowing all rear-ends to interchange seamlessly without requiring any special tools





#### Uni to Lincoln® Connection

### 1-3



- 1. Assemble Lincoln® Power Pin
- 2. Assemble Lincoln® Gas Tube Assembly
- 3. Connect Quick Fit Assembly

4



4. Complete Lincoln® Connection





### Uni to Panasonic® Connection

### 1-3



- 1. Assemble Panasonic® Power Pin
- 2. Assemble Panasonic® Gas Tube Assembly
- 3. Connect Quick Fit Assembly

4




4. Complete Panasonic® Connection






#### Uni to Euro® Connection

### 1-2

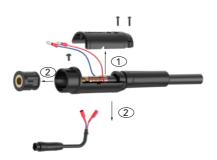

- 1. Open Rear End Housing
- 2. Remove Gun Plug Body and Male Switch Wire Plug

### 3-5

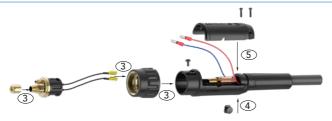

- 3. Assemble Liner Retaining Nut and Hybrid Gun Plug Body and Gun Plug Nut
- 4. Assemble Housing Stopper
- 5. Assemble Housing

6



6. Complete Euro® Connection





Tweco®, Miller®, LPB and LPW Connection



The system is built with a common gun plug connector, allowing all rear-ends to interchange seamlessly without requiring any special tools





#### Uni to Lincoln® Connection

### 1-3



- 1. Assemble Lincoln® Power Pin
- 2. Assemble Lincoln® Gas Tube Assembly
- 3. Connect Quick Fit Assembly

4



4. Complete Lincoln® Connection





#### Uni to Panasonic® Connection

### 1-3



- 1. Assemble Panasonic® Power Pin
- 2. Assemble Panasonic® Gas Tube Assembly
- 3. Connect Quick Fit Assembly

4



4. Complete Panasonic® Connection





#### Uni to Euro® Connection

### 1-2



- 1. Remove Support, open Housing
- 2. Disassemble Plug Body and Male Switch Wire Plug

### 3-5



- 3. Assemble Nut and Euro® Body
- 4. Assemble Flat cover, Housing and Support

6



6. Complete Euro® Connection

#### **ARC SERIES**

# Make Work Life Easier

MPA025 / 2024.07



